


WINDOW FLASHING DETAIL




City of Cotati
 Community Development
 Department
 201 W Sierra Avenue
 Cotati, CA 94931
 (707) 665-3636
permits@cotaticity.gov

THIS DRAWING DEPICTS MINIMUM CODE REQUIREMENTS PER THE 2022 CALIFORNIA CODE CYCLE - INFORMATION IS FOR REFERENCE ONLY AND IS NOT A SUBSTITUTE FOR ACCURATE DRAWINGS PREPARED FOR EACH PROPOSED CONSTRUCTION PROJECT

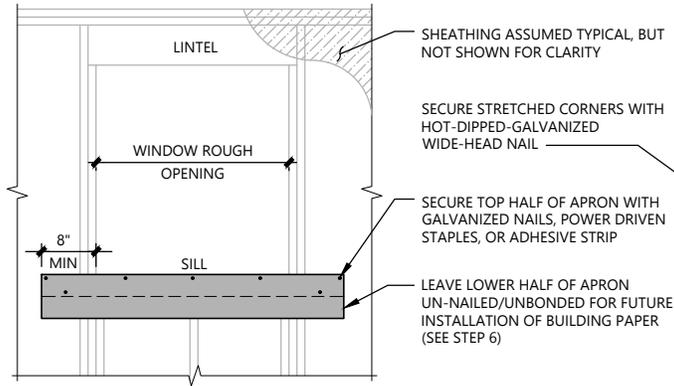


STEP 1

INSTALL TOP EDGE OF APRON LEVEL WITH THE ROUGH SILL - EXTEND THE APRON AT LEAST 8" BEYOND BOTH EDGES OF ROUGH OPENING

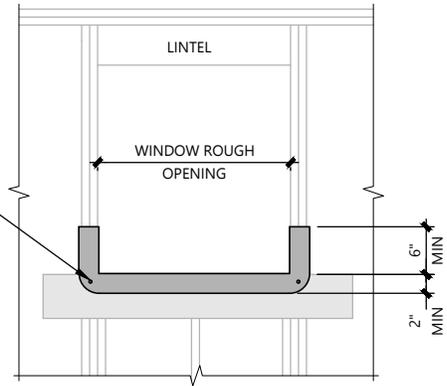


STEP 2

PLACE AN ADHESIVE SILL STRIP ON TOP OF THE SILL PLATE, AND 6" UP THE STUDS - STRETCH AROUND THE CORNER AND EXTEND 2" MINIMUM ONTO THE APRON

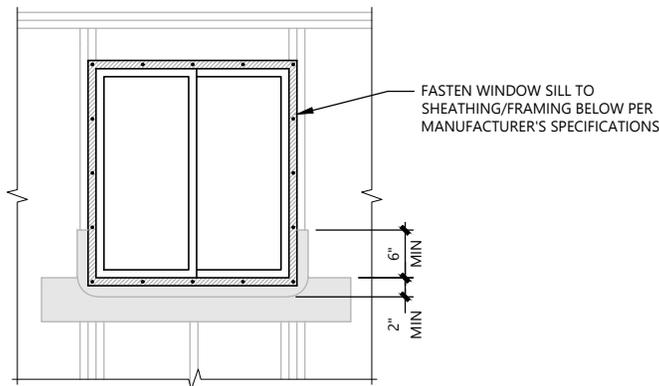

STEP 3

INSTALL WINDOW INTO ROUGH OPENING - CAULK UNDER TOP AND SIDE WINDOW FLANGES - DO **NOT** CAULK UNDER BOTTOM FLANGE

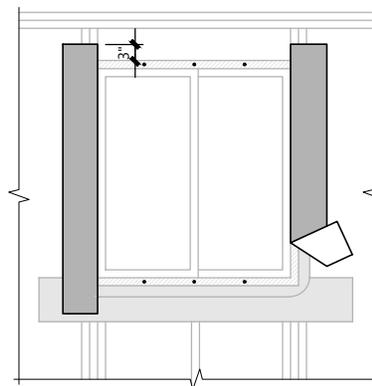

STEP 4


INSTALL SIDE ADHESIVE FLASHING STRIPS OVER WINDOW FLANGE - EXTEND 3" MINIMUM ABOVE TOP OF WINDOW FLANGE

WINDOW FLASHING DETAIL




City of Cotati
 Community Development
 Department
 201 W Sierra Avenue
 Cotati, CA 94931
 (707) 665-3636
permits@cotaticity.gov

THIS DRAWING DEPICTS MINIMUM CODE REQUIREMENTS PER THE 2022 CALIFORNIA CODE CYCLE - INFORMATION IS FOR REFERENCE ONLY AND IS NOT A SUBSTITUTE FOR ACCURATE DRAWINGS PREPARED FOR EACH PROPOSED CONSTRUCTION PROJECT

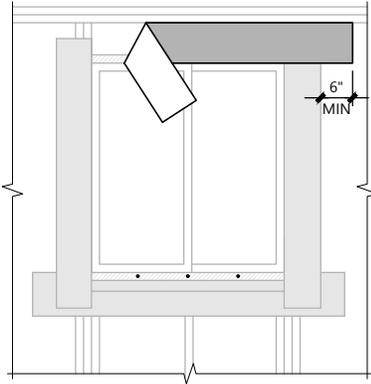

STEP 5

INSTALL HEADER ADHESIVE FLASHING STRIP OVER TOP WINDOW FLANGE - EXTEND 6" MINIMUM BEYOND SIDE FLASHING

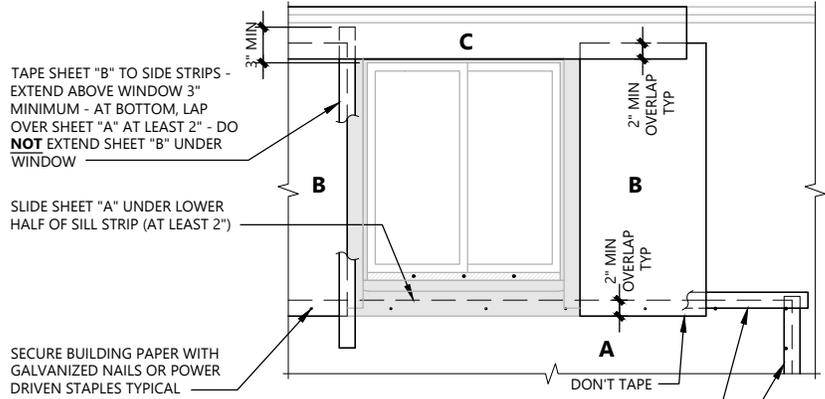

STEP 6

LAYER BUILDING PAPER FROM THE BOTTOM UP (A, THEN B, THEN C) - TAPE THE SIDES OF EACH SHEET FIRST, THEN THE TOP - DO **NOT** TAPE THE BOTTOM OF SHEETS